



# Nikon Coolpix P90 Memory Card Replacement

This guide provides instructions to replace a corrupt or full memory card.

Written By: Elizabeth Kamine



## INTRODUCTION

The Nikon Coolpix P90 is only compatible with SD and SDHC memory cards. It is not compatible with Multi Media Cards (MMC).

## Step 1 — Camera Base



- Use your finger to push the notch of the compartment door to the center of the camera body.
- Release the compartment door and it will swing open.
- Remove the existing battery with your fingers.

## Step 2 — Memory Card



- Gently push memory card down into compartment until it clicks to unlock.
- Release and pull memory card out with your fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 01:37:12 AM.